THE NEW SANTON X-TYPE SWITCH

TECHNICAL SPECIFICATIONS AND INSTRUCTIONS FOR USE

SANTON X-TYPE SWITCH: X100.25P6E-(A)



Switch disconnector for solar application according to IEC 60947-1&3




accessories:


	Contact scheme			Positions			
1	Marking	Symbol	Marking				4
12		-/-					
11		-/-					
10		-/-					
9	-3	-/-	-3	X			
8		_/_	+3	X			
7		_/_	+3	X			
6		_/_	+2	X			
5		L/_	+2	Х			
4	-2	-/-	-2	X			
3	-1	-/-	-1	X			
2		r/-	+1	X	*		
1			+1	X			


Contacts are made in X marked position.				
COLUMN STOCK	Unit			
		V dc		
le	25	A dc		
Ue		V dc		
le		A dc		
	single hole mounting IP65 [I			
	6			
	DC-21B			
without a knob, suitable for standard black knob [A]				
OFF at 12 hr, ON at 3	OFF at 12 hr, ON at 3 hr [E]			
Uimp	8	kV		
Ui	1000	V		
lu	25	Α		
lcw	750	Α		
Icm	1,4	kA		
	9	kA		
		kA		
	9,0	W		
ethod of operation independent manual operation				
	124 x 47 x 126.5	mm		
layers H is:	9			
	1,5 1,7	Nm		
C.	2,0 2,5	Nm		
)	4	mm ²		
	- 5 and + 40	°C		
	- 20 and + 70	*c		
	90	%		
	2			
	IP20			
g	IP65			
Ue	0	V AC		
le	0	A AC		
	0			
No auxiliary contact.	(0 contactbrug type	e 16 A)		
	Symbols for intercol Symbol Ue le Ue le Ue le Without a knob, suita OFF at 12 hr, ON at 3 Uimp Ui lu lcw lcm independent manual layers H is:	Symbols for interconnection:		





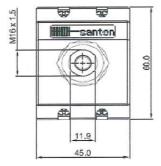

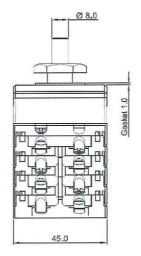

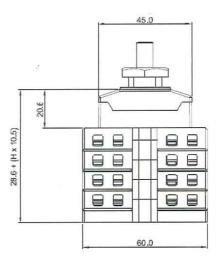

Mounting instructions

In the application all ratings have to be respected. When building the switch in an enclosure, the space envelope must be respected. The terminals can take flexible wires up to 6 mm² and fork shoes for wires up to 10 mm² (type 3547C from Vogt). After mounting, the wiring must be checked and the switch must operate smoothly.

Maintenance

The X type switches are designed for a very long life but it is advised to do some simple yearly maintenance.

- Check the installation for signs of overload or overheating. The terminals may not exceed the limit of 85°C under full load.
- By operating the switch a few times (5x) the contacts will clean themselves and the switch will have a longer life.

Dimensions, specifications and data shown could be subject to change without notice.

JD Auspice Co.,Ltd. TEL: 886-2-2595-9780 FAX: 886-2-2595-9412 service@jdauspice.com www.jdauspice.com

Superior Switch Solutions