THE NEW SANTON X-TYPE SWITCH

- santon

TECHNICAL SPECIFICATIONS AND INSTRUCTIONS FOR US

SANTON X-TYPE SWITCH:

IEC 60947-1&3

Switch disconnector for solar application according to

X75.25B6E-A



ы	2	w	4	G	6	7	00	9	0	П	2	_
+1	4	-2	+2	±	ů							Marking
	1/1	1/1	1/1	1	1	1	1/1	1/1	1	 	1/1	Symbol
+1	4	-2	+2	÷3	ώ							Marking
×	×	×	×	×	×		Fr.					1 2
							ŧ					3
											1	46


Contacts are made in "X" marked position.


œ	284		weight
		No auxiliary contact	auxiliary contact, nominal current 16A at 250 V, AC15
	0		number of DC poles
A AC	0	le	nominal current (AC poles)
V AC	0	Ue	nominal voltage (AC poles)
		ing	IP rating gland of the shaft in case of single hole panel mounting
	IP20		IP rating terminals
	2		pollution degree
%	90		maximum relative humidity, without condensation at 20°C
٦,	20 and + 70	- 20	storage temperature allowed between
٥.	5 and + 40	-5	ambient temperature allowed between
mm ²	4	9	minimum required fine wire cross-section: IEC60947-1, table 9
Z N	2,5	ix. 2,0	tightening torque screw in the standard black knob, min max.
N N	1,7	1,5	terminal screws M4 need a tightening torque, min max.
	ω	layers H is:	see the drawing for the height of the switch. The number of layers H is:
mm	124 x 47 x 98	124:	minimum required dimensions of enclosures l x w x h*
	ň	independent manual operation	method of operation
٤	6,0		max power dissipation
ĸ			max. cut-off current
ΚĀ	v		rated conditional short-circuit current
ΚA	1,4	lcm	rated short-circuit making capacity
A	750	lcw	rated short-time withstand current (1s)
Α	25	īu	rated thermal current uninterrupted duty
<	1000	CI.	insulation voltage
KV	œ	Uimp	rated impulse withstand voltage
		OFF at 12 hr, ON at 3 hr [E]	positions
		standard black [A]	actuator
	DC-21B		utilization category DC
	6		number of DC poles
	[8]	DIN rail and or Base mounting [B]	method of mounting
A dc		le	nominal current (second rating DC poles, if requested)
V dc		Ue	nominal voltage (second rating DC poles, if requested)
A dc	25	le	nominal current (DC poles)
V dc	750	Ue	nominal voltage (DC poles)
Unit		Symbol	Technical data
		Symbols for interconnection: [


santon

accessories: weight

00

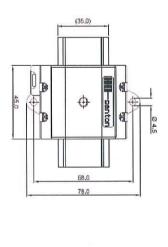

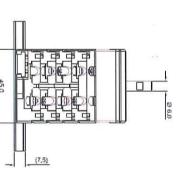

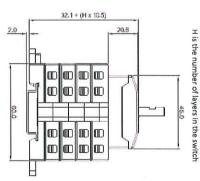

Mounting instructions

3547C from Vogt). After mounting, the wiring must be checked and the switch must operate smoothly. In the application all ratings have to be respected. When building the switch in an enclosure, the space envelope must be respected. The terminals can take flexible wires up to 6 mm² and fork shoes for wires up to 10 mm² (type

95,1

Maintenance

The X type switches are designed for a very long life but it is advised to do some simple yearly maintenance.

- Check the installation for signs of overload or overheating. The terminals may not exceed the limit of 85°C under

By operating the switch a few times (5x) the contacts will clean themselves and the switch will have a longer life

Dimensions, specifications and data shown could be subject to change without notice.