THE NEW SANTON X-TYPE SWITCH

- santon

TECHNICAL SPECIFICATIONS AND INSTRUCTIONS FOR USE

SANTON X-TYPE SWITCH:

X85.16B2E-A

IEC 60947-1&3 Switch disconnector for solar application according to



7		onizidi scheme			ġ	S S	ľ
- Maria	Marking	Symbol I	Warking				44
12		1/1					
Ε		<u> </u>					
10		\ \ 					
9		\ \ !					
00		1/1					
7							
0		\ \ 					
S		<u> </u>				П	Ш
4		1/1					
ω		1					Ш
2	4	1	ப்	×			
1	+1	 - 	+1	×			

Symbole	Contacts
for interconne	are made i
nection: []	n "X" marked
	position.

	Symbols for interconnection: [on: []	
Technical data	Symbol		Unit
nominal voltage (DC poles)	Ue	850	V dc
nominal current (DC poles)	le	16	A dc
nominal voltage (second rating DC poles, if requested)	Ue		V dc
nominal current (second rating DC poles, if requested)	le		A dc
method of mounting	DIN rail and or Base mounting [B]	ting [B]	
number of DC poles		2	
utilization category DC		DC-218	
actuator	standard black [A]		
positions	OFF at 12 hr, ON at 3 hr [E]		
rated impulse withstand voltage	Uimp	œ	kV
insulation voltage	Ui	1000	<
rated thermal current uninterrupted duty	lu	16	Α
rated short-time withstand current (1s)	lcw	480	Α
rated short-circuit making capacity	lcm	1,4	Æ

max. cut-off current

max power dissipation

method of operation

independent manual operation

124 x 47 x 56

0,8

U

< 5 5

2,0 1,5

2,5 1,7

2,5

mm² E S S mm

- 20 and + 70

90

IP20

- 5 and + 40

rated conditional short-circuit current

- santon

0 0

accessories:

auxiliary contact, nominal current 16A at 250 V, AC15

number of DC poles nominal voltage (AC poles) IP rating terminals

nominal current (AC poles)

æ

No auxiliary contact

157

0 00


V AC


IP rating gland of the shaft in case of single hole panel mounting


maximum relative humidity, without condensation at 20°C

storage temperature allowed between ambient temperature allowed between minimum required fine wire cross-section: IEC60947-1, table 9 tightening torque screw in the standard black knob, min. - max. terminal screws M4 need a tightening torque, min. - max. minimum required dimensions of enclosures I x w x h*

* see the drawing for the height of the switch. The number of layers H is:

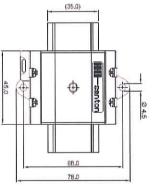

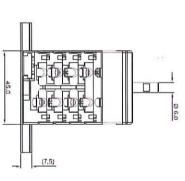

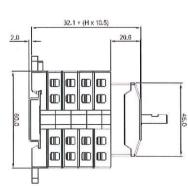

H is the number of layers in the switch

95,1

Mounting instructions

In the application all ratings have to be respected. When building the switch in an enclosure, the space envelope 3547C from Vogt). After mounting, the wiring must be checked and the switch must operate smoothly. must be respected. The terminals can take flexible wires up to 6 mm² and fork shoes for wires up to 10 mm² (type

Maintenance

- The X type switches are designed for a very long life but it is advised to do some simple yearly maintenance.
- Check the installation for signs of overload or overheating. The terminals may not exceed the limit of 85°C under
- \cdot By operating the switch a few times (5x) the contacts will clean themselves and the switch will have a longer life.

Dimensions, specifications and data shown could be subject to change without notice.